

**KIMP23** remote printer for  
**AMI310** portable  
instrument



**Technical features**

**Dimensions (without protective cover)** : 85.5 mm x 150 mm x 55 mm  
**Weight (without protective cover)** : 400 g  
**Operating temperature** : from 0 to 50 °C  
**Storage temperature** : from -20 to +60 °C

**Print values during the measurement**

- › Press **On/Off** button of the printer to turn it on.
- › Press **“Imprim”** function key of the AMI 310 on the measurement screen.  
*Measurement results are printing on the ticket.*
- › Press **On/Off** button when printing is finished to turn the printer off.



In order to have a correct printing, infrared sensors of the printer and AMI 310 must be face each other (see pictures above).



**KIMP23** remote printer for  
**AMI310** portable  
instrument



**Technical features**

**Dimensions (without protective cover)** : 85.5 mm x 150 mm x 55 mm  
**Weight (without protective cover)** : 400 g  
**Operating temperature** : from 0 to 50 °C  
**Storage temperature** : from -20 to +60 °C

**Print values during the measurement**

- › Press **On/Off** button of the printer to turn it on.
- › Press **“Imprim”** function key of the AMI 310 on the measurement screen.  
*Measurement results are printing on the ticket.*
- › Press **On/Off** button when printing is finished to turn the printer off.




In order to have a correct printing, infrared sensors of the printer and AMI 310 must be face each other (see pictures above).



## Change the paper roll

- > Raise the upper part of the printer pulling up the transparent part.
- > Put a new paper roll (Both sides of the paper are different : the brightest side is the printed side and must faced the user).
- > Pull up about 0.50 cm of paper.
- > Close the upper part of the printer.

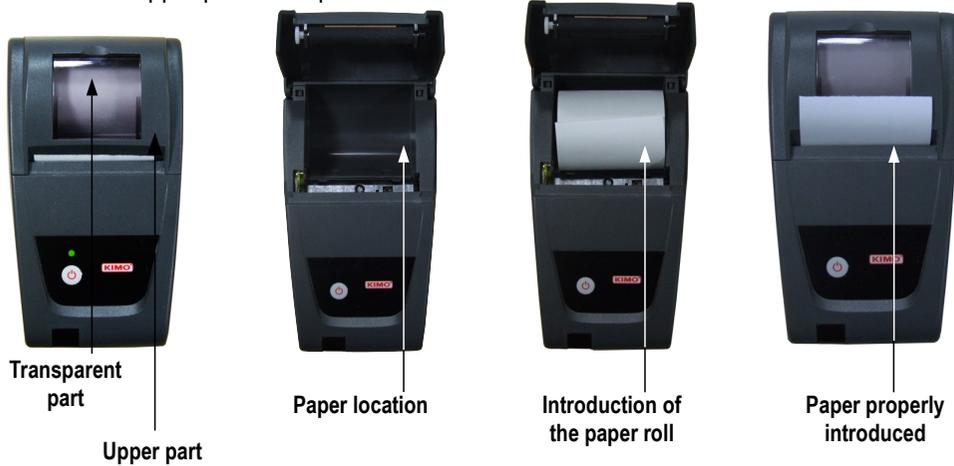

## Change the batteries

- > Remove the protective cover of the printer.
- > Remove the batteries cover.
- > Remove the used batteries.
- > Put some new 1.5V LR6 AA batteries observing proper polarity.
- > Put the battery cover.



## LED indications

The LED above the On/Off button has several meanings :

- > Continuous green : printer turned on and ready to operate
- > Sequence of one flash : paper is missing or there is not any paper out the printer → put a paper roll or let 0.5 cm of paper out
- > Sequence of 2 flashes : thermal too hot → let the head cool down
- > Sequence of 3 flashes : discharged → change batteries


[www.kimo.fr](http://www.kimo.fr)

EXPORT DEPARTMENT  
Boulevard de Beaubourg - Emerainville - BP 48  
77312 MARNE LA VALLEE CEDEX 2  
Tel : + 33.1.60.06.69.25 - Fax : + 33.1.60.06.69.29



## Change the paper roll

- > Raise the upper part of the printer pulling up the transparent part.
- > Put a new paper roll (Both sides of the paper are different : the brightest side is the printed side and must faced the user).
- > Pull up about 0.50 cm of paper.
- > Close the upper part of the printer.

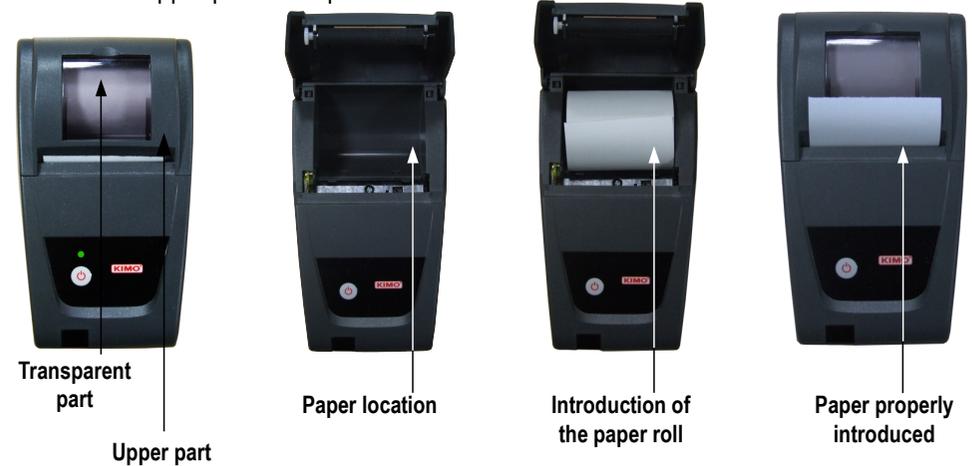

## Change the batteries

- > Remove the protective cover of the printer.
- > Remove the batteries cover.
- > Remove the used batteries.
- > Put some new 1.5V LR6 AA batteries observing proper polarity.
- > Put the battery cover.



## LED indications

The LED above the On/Off button has several meanings :

- > Continuous green : printer turned on and ready to operate
- > Sequence of one flash : paper is missing or there is not any paper out the printer → put a paper roll or let 0.5 cm of paper out
- > Sequence of 2 flashes : thermal too hot → let the head cool down
- > Sequence of 3 flashes : discharged → change batteries

[www.kimo.fr](http://www.kimo.fr)

EXPORT DEPARTMENT  
Boulevard de Beaubourg - Emerainville - BP 48  
77312 MARNE LA VALLEE CEDEX 2  
Tel : + 33.1.60.06.69.25 - Fax : + 33.1.60.06.69.29

