







# KISTOCK DATA LOGGER KT 320 / KTT 320









**Display** 

Internal sensor

# **Features**

- Software for configuration and data visualisation freely downloadable
- Software for configuration and data processing available in option
- Safety lock wall mount with inviolability system

**External sensor** 

- Storage capacity of 2,000,000 points
- Fast data downloading: 18,000 points/s

- Up to 5 recordable parameters simultaneously
- 2 configurable setpoint alarms for each channel
- · 2 lines LCD screen
- Wireless connection for smartphones and tablets (Android and iOS)

**Parameters** 

• Magnetic mounting

# References

Material

Dimensions

Reference

\/	1	2. I for CMART RILLC*	Tanananak wa kumidika aumank wakana inandaian	
Yes	i: temperature	2: Input for SWIART PLUG " probes	Temperature, humidity, current, voltage, impulsion	
Yes	-	4: Input for thermocouple probes	Temperature	
res				
		2 lines LCD screen Dimensions of screen: 49.5 x 45 mm 2 indication LEDs (red and green)		
n		1 micro-USB input		
		1 OK key 1 Selection key		
		2 x lithium AA 3.6 V batteries		
		IP65: KT 320 IP54: KTT 320**		
	res	Yes -	Yes - 4: Input for thermocouple probes  res  2 line Dimensions of 2 indication I  n 1 mic  1 1 Se  2 x lithium	

 Weight (with batteries)
 KT 320: 206 g

 KTT 320: 200 g
 KTT 320: 200 g

Air and neutral gases Hygrometry: in non condensing condition Maximum altitude: 2000 m

Compatible with food industry environment

**ABS** housing

110.2 x 79 x 35.4 mm

Warranty 1 year

**Environmental conditions of use** 

<sup>\*</sup> Input which allows to plug different compatible SMART PLUG probes: see optional probes and cables page 5.

 $<sup>\</sup>ensuremath{^{*\,*}}$  With all thermocouple probes connected.

# **Technical specifications**

Measuring range

	K1 320	K11 320	
Units displayed <sup>(1)</sup>	°C, °F, °C $_{td'}$ , °F $_{td'}$ , % RH, mV, V, mA, A Programmed units: please see the class 320 KISTOCK user manual. Free units: for the free units creation, please see the KILOG software user manual.	°C, °F	
Resolution	0.1 °C, 0.1 °F, 0.1% RH, 1 mV, 0.001 V, 0.001 mA, 0.1 A	0.1 °C, 0.1 °F	
External input	Micro-USB female connector		
Input for probe	2 SMART PLUG <sup>(2)</sup> inputs	4 inputs for thermocouple probes (K, J, T, N, S)	
Internal sensor	Temperature	-	
Type of sensor	NTC	Thermocouple	
	Massuring range of the internal concor(3):	K: from -200 to $+1300$ °C J: from -100 to $+750$ °C	

Accuracies  $^{(4)}$   $\pm 0.4$  °C from -20 to 70 °C  $\pm 0.8$  °C below -20 °C

K, J, T, N:  $\pm 0.4$  °C from 0 to 1300 °C  $\pm (0.3\%$  of the reading  $\pm 0.4$  °C) below 0 °C S:  $\pm 0.6$  °C

T: from -200 to +400 °C

N: from -200 to +1300 °C S: from 0 to 1760 °C


Setpoints alarms	2 setpoint alarms on each channel		
Frequency of measurement	From 1 second to 24 hours		
Operating temperature <sup>(5)</sup>	From -40 to +70 °C	From -20 to +70 °C	
Storage temperature	From -40 to +85 °C		
Battery life	7 years <sup>(6)</sup>		

**European directives** 2011/65/UE RoHS II ; 2012/19/UE DEEE ; 2014/30/UE CEM ; 2014/35/UE

Measuring range of the internal sensor $^{(3)}$ :

From -40 to +70 °C

# **Dimensions**

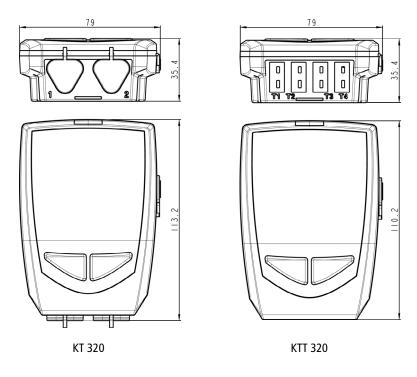

# Connections KT 320: 2 mini-DIN connections KTT 320: 4 mini-thermocouples connections PC connection Micro-USB connector

<sup>(1)</sup> Some units are available only with optional probes.

<sup>&</sup>lt;sup>(2)</sup> Input which allows to plug different compatible probes: see optional probes and cables page 3.

<sup>&</sup>lt;sup>(3)</sup> Other measuring ranges are available according to the connected probe: see optional probes and cables page 3.

<sup>(4)</sup> All accuracies indicated in this document were stated in laboratory conditions and can be guaranteed for measurement carried out in the same conditions, or carried out with calibration compensation.

<sup>(5)</sup> The screen can be hard to read, and its display speed often slows down at temperatures lower than 0 °C. This has no effect on the accuracy of measurements.

 $<sup>^{(6)}</sup>$  On the basis of 1 measurement each 15 minutes at 25 °C.

# Optional probes and cables(1)



All the probes for the KT 320 KISTOCK have the SMART PLUG technology.

An automatic recognition and the adjustment parameters storage make them 100% interchangeable.

References	Description	Measuring range			
External or ambient thermo-hygrometric probes					
KITHA	Interchangeable hygrometry and ambient temperature probe	Hygrometry: from 0 to 100% RH Temperature: from -20 to $+70$ °C			
KITHP-130	Remote interchangeable hygrometry and temperature probe	Hygrometry: from 0 to 100% RH Temperature: from -20 to +70 $^{\circ}$ C			
KITHI-150	Remote interchangeable hygrometry and temperature probe	Hygrometry: from 0 to 100% RH Temperature: from -40 to +180 °C			
General use or insertion Pt 1	00 temperature probes				
KIRGA-50 / KIRGA-150	IP65 immersion probe (50 or 150 mm)	From -40 to +120 °C			
KIRAM-150	Ambient probe 150 mm	From -40 to +120 °C			
KIRPA-150	Penetration probe IP65	From -50 to +250 °C			
KIPI3-150-E	IP68 penetration probe with handle	From -50 to +250 °C			
KITI3-100-E	IP68 penetration probe with T-handle	From -50 to +250 °C			
KITBI3-100-E	IP68 penetration probe with corkscrew handle	From -50 to +250 °C			
KIRV-320	Velcro® probe	From -20 to +90 °C			
KICA-320	Smart adapter for Pt100 probe	From -200 to +600 °C according to the probe			
Input current, voltage and in	npulsion cables				
KICT	Voltage input cable	0-5 V or 0-10 V			
KICC	Current input cable	0-20 mA or 4-20 mA			
KICI	Pulse input cable	Maximal voltage: 5 V Type of input: TTL frequency counting Maximal frequency: 10 kHz Maximum number of recordable points: 20,000 points			
Clamp-on ammeters					
KIPID-50	Ammeter clamp from 0 to 50 A, frequency range from 40 to 5000 Hz	From 0 to 50 AAC			
KIPID-100	Ammeter clamp from 0 to 100 A, frequency range from 40 to 5000 Hz	From 1 to 100 AAC			
KIPID-200	Ammeter clamp from 0 to 200 A, frequency range from 40 to 5000 Hz	From 1 to 200 AAC			
KIPID-600	Ammeter clamp from 0 to 600 A, frequency range from 40 to 5000 Hz	From 1 to 600 AAC			
Thermocouple probes					

All the thermocouple temperature probes for the KTT 320 KISTOCK have a class 1 sensitive element as per IEC 584-1, 2 and 3 standards. For more details about the available thermocouple probes, please see the "Thermocouple probes" datasheet.

# **Recorder function**

#### Five recording modes

KISTOCK can record in 5 different ways:

- "Immediate" mode records values according to a predefined interval.
- "Minimum", "Maximum" and "Average" record automatically the calculation of minimum, maximum or average of measured values during an interval of recording.
  - "Monitoring" mode allows to get an accurate history report during error events to help troubleshooting, without stopping the measurement logging. To proceed this way, you just have to define:
  - a record interval to be used whilst the readings are beyond the setpoints
  - a record interval for the values measured during each reading beyond the setpoints
- Furthermore, you can also let your KISTOCK record non-stop ("loop" recording option).

# Four types of dataset start

Once your recording mode has been set, you can launch your dataset:

- With a delayed start (with predefined date and time)
- With the software
- With push-button
- With "Online" option. In this case, your datasets are directly sent, saved and displayed on your PC in real time.


# Six types of dataset stop

You can stop your dataset:

- According to a date and time (if it was started the same way)
- · According to a period
- According to a predefined number of recording points
- Once the storage capacity is full
- With "Stop" option of the software
- By holding "OK" key during 5 seconds, if this function has been previously activated by the software

<sup>(1)</sup> For more details, please see the "Measuring probes for KT 320 KISTOCK" and "Thermocouple probes" datasheets.

# **Display**

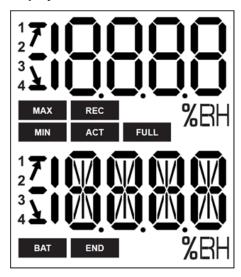

**END** DATASET is finished.

REC Indicates that one value is being recorded.

It flashes: the DATASET did not start already.

Flashing slowly: DATASET is between 80 and 90% of the storage capacity. Flashing quickly: DATASET is between 90 and 100% of the storage capacity. Constant: storage capacity full.

BAT Constant: indicates that the batteries have to be replaced.

 $\frac{12}{24}$  Indicates the channel number which is measuring.

**ACT** Screen actualisation of measured values.

The displayed values are the maximum/minimum values recorded for the channels displayed.

Indication of the direction of exceeding the threshold in the recorded measurement

# Mounting

The KISTOCK class 320 have a magnetic mounting, so you can fix it easily.

# Replace the battery



With 4 years\* of battery life, the KISTOCK devices guarantee long-term measurements.

To replace the battery:

- Unscrew the 4 screws on the back side of the device with a screwdriver.
- Remove the back side and the old batteries.
- Insert the new battery and respect the polarity.
- Replace the back side and the 4 screws
- \* On the basis of 1 measurement each 15 minutes at 25 °C.

# Safety lock wall mount with padlock



Mount the safety lock support on the required place.

- 1. Present the KISTOCK data logger on the support starting with the inferior part
- 2. Clip the KISTOCK on the support by falling back the superior part
- 3. Insert the padlock to ensure the safety lock function




The data logger can be placed on the screw-mount without the safety lock function.

• To remove the data logger from the support, proceed on reverse order.




# Dimensions of the wall mount (mm)

Front view

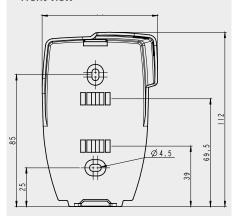

Side view



#### Software



Kilog Lite: free software to download on sauermanngroup.com

Allows the data download (graphics and points statement) and the data logger configuration.



### Configuration and data processing software

KILOG software allows to configure, save and process your data in a very simple way.

- Software only: Ref. KILOG-3-N
- Complete set: software + 1 USB cable, Ref. KIC-3-N

# **Accessories**

Accessories	Reference
1 AA lithium 3.6 V battery  2 batteries are required for class 320 data loggers	KBL-AA
Safety lock wall mount with padlock	KAV-320
Wired extension for class 320 KISTOCK probes In polyurethane, 5 m length with male and female mini-DIN connectors Note: several extensions can be wired in order to obtain up to 25 m cable length	KRB-320
<b>Data collector</b> Collects up to 20,000,000 points from one or several KISTOCK directly on-site. Results restitution on PC of realised datasets	KNT-320
USB micro-USB cable which allows to plug your KISTOCK data logger to your PC	CK-50



Only the accessories supplied with the device must be used.

# Maintenance

Please avoid any aggressive solvent.

Please protect the device and probes from any cleaning produce containing formalin, that may be used for cleaning rooms and ducts.

# Calibration

A calibration certificate is available as option in paper format.

We recommend to carry out a yearly checking.

#### **Guarantee period**

KISTOCK data loggers have 1-year quarantee for any manufacturing defect (return to our After-sales service required).

#### **Precautions for use**

Please always use the device in accordance with its intended use and within parameters described in the technical features in order not to compromise the protection ensured by the device.



BE CAREFUL! Material damages can happen, so please apply the precautionary measures indicated.

Once returned to Sauermann, required waste collection will be assured in the respect of the environment in accordance to guidelines relating to WEEE.



