

# Weather instruments that set the standard

Technical precision and timeless elegance have been the hallmark of Maximum weather instruments from the very beginning. Choose from a wide selection of digital and analog instruments that let you monitor wind speed, wind direction, temperature, barometric pressure, humidity and more. Each instrument is made in the U.S.A. and backed by Maximum's 5-year limited warranty.



# Wind speed and direction


**Maestro** displays local wind conditions and is Maximum's most popular instrument! The outer scale measures wind speed from 0-100 MPH while the inner scale shows the 0-160 km/h equivalent. Wind direction is displayed via eight highly visible red LEDs. Wind speed is self-powered by the rooftop sensor, while the direction LEDs are powered by the included AC adapter. High gust is saved with our unique Gust Register, allowing you to monitor the highest gust even if you are not present when the wind occurs. Includes 60' cables, AC adapter, wind speed & direction sensors and mounting hardware.

## Maestro



**Wireless Maestro** has an electronic memory of high wind speed and direction (instead of using Gust Register). Simply move the toggle switch to the right to view high gust speed and left to view high gust direction. A built-in scale doubler and tripler lets you record winds up to 300 MPH! Includes AC adapter, wind speed & direction sensors, wireless transmitter and mounting hardware.

## Wireless Maestro

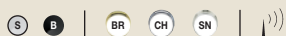

**Maestro 2-S** is similar to Maestro, but with a second MPH scale instead of the km/h scale. A toggle switch at the bottom of the case changes wind speed readings from the 0-120 MPH scale to the 0-40 MPH scale, providing a more dramatic display of lower wind speed. Gust Register can record gusts up to 120 MPH and cannot be used with the 0-40 MPH scale. Includes 60' cables, AC adapter, wind speed & direction sensors and mounting hardware.

## Maestro 2-S



**Gust Register** is used with Maestro and Vigilant to let you record highest gusts. Details, pg. 26.

Wireless instruments require a Wireless Receiver, sold separately (see pg. 16). optional chrome or satin nickel case.



Maestro



Maestro 2-S