



USER MANUAL

MP 210

THERMO-ANEMO-MANOMETER

Table of contents

1.1 Instrument description	4
1.2 Keys description.	4
1.3 Remove battery	5
1.4 Directive 2014/53/EU	5
CONNECTIONS OF THE MP 210	6
2.2 Connections.	6
INFORMATION	8
SET THE INSTRUMENT	9
5 5	
,	
4.8 Set printing	10
· · · · · · · · · · · · · · · · · · ·	
5.1 Use of the wire probes and modules	11
·	
CHANNEL CONFIGURATION	12
6.2 Vanes and hot wire	14
6.3 Delta T	15
7.1 Start and record datasets	16
7.1.1 Manual dataset	16
7.1.2 Automatic dataset	16
7.1.3 View the recorded datasets	17
7.2 Launch and save averages	17
7.2.2 Automatic average	18
7.2.3 Automatic Point/Point average	18
7.4 Hold-Min./Max	19
SETTING OF MEASUREMENT PARAMETERS	20
8.1.1 Unit	20
8.1.2 Type	20
8.1.3 Normative value	20
8.1.4 Alarm	21
8.1.5 Integration	21
8.1.6 Atmospheric pressure	21
8.2 Thermocouple module	21
8.2.1 Unit	21
8.2.2 Type	21
	1.3 Remove battery. 1.4 Directive 2014/53/EU. CONNECTIONS OF THE MP 210. 2.1 Main features. 2.2 Connections. INFORMATION. SETTHE INSTRUMENT. 4.1 Set language. 4.2 Modify date and time. 4.3 Activate or deactivate the beep key. 4.4 Set auto-off. 4.5 Set backlight. 4.6 Set security. 4.7 Set code. 4.8 Set printing. SETTHE PROBES. 5.1 Use of the wire probes and modules. 5.2 Special precautions for air velocity probes. 5.3 Use of wireless probes. CHANNEL CONFIGURATION. 6.1 Pressure module. 6.2 Vanes and hot wire. 6.3 Delta T. START AND RECORD DATASET. 7.1.1 Manual dataset. 7.1.2 Automatic dataset. 7.1.3 View the recorded datasets. 7.1.1 Automatic dataset. 7.1.1 Point/Point average. 7.2.1 Point/Point average. 7.2.1 Point/Point average. 7.2.3 Automatic verage. 7.2.4 Unin./Max. SETTING OF MEASUREMENT PARAMETERS. 8.11 Unit. 8.1.2 Type. 8.1.3 Normative value. 8.1.4 Alarm.

8.2.3	Alarm	21
8.3 Vane	probe and hotwire probe	22
	Unit	
8.3.2	Normative value	22
8.3.3	Alarm	22
8.3.4	Atmospheric pressure	22
	leak	
	Unit	
8.5 CO/to	emperature probe	23
8.5.1	Unit	23
852	Alarm	23
8.6 Tacho	ometry	23
8.6.1	Unit	23
	Туре	
	71	

1. PRESENTATION

1.1 Instrument description



1.2 Keys description

- > Left key: allows to navigate from left to right
- > Right key: allows to navigate from right to left
- > **Up key**: increments a value or a level
- > **Down key**: decrements a value or a level
- OK key: validates an action
- **Esc key:** cancels the action or backs to previous step

4 PRESENTATION

1.3 Remove battery

- > Turn off the instrument.
- > Turn it over.
- > Press the red button while sliding down the battery.



1.4 Directive 2014/53/EU

Hereby, Sauermann Industrie SAS declares that the radio equipment type MP 210 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.sauermanngroup.com

PRESENTATION 5

2. CONNECTIONS OF THE MP 210



2.1 Main features

Screen

120 x 160 pixels graphic display and backlight. Display of 6 measurements, 3 simultaneously. Size 50 x 67 mm.

Printer (available as option)

The paper of the instrument is a thermal paper with a 10-year guarantee. It has an easy replacement system of the paper (Easyload). In addition, printing is fast.

Battery

Rechargeable Li-ion battery inside the instrument, 16 h battery-life with a pressure module or 14 h a hotwire probe. The instrument is supplied with a 5 V, 1 A power adapter to load the internal battery. The current loading is indicated by a battery symbol on the top left of the screen. The orange led on the bottom of the instrument is also on until the full loading of the battery (the led turns green).

2.2 Connections

Interchangeable modules

The interchangeable modules have the SMART-2014 system and are automatically recognized once the connection is made on the instrument.

• Thermocouple module:



Allows to measure temperature on Tc1, Tc2, Tc3 and Tc4 channels with wired thermocouples K, J, T or S probes ended with a male miniature connector


Pressure module:



Allows to measure the differential pressure ΔP and to calculate air velocity and airflow with a **Pitot tube** or **Debimo blades.** It also measures the thermocouple temperature with a wired thermocouple probe ended with a male miniature connector.

Wire probes with SMART-2014 system

Wire probes with SMART 2014 system are automatically recognized when connected to the instrument.

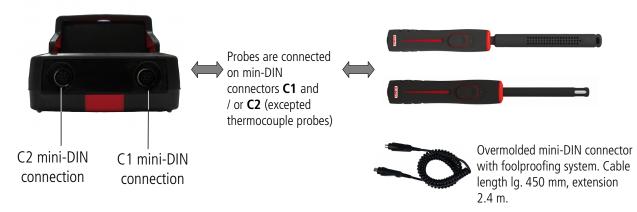

• Wireless probe / instrument communication

Wireless communication between probe and instrument with automatic recognition after power-up.





Wireless probes shall be located near the instrument for initial recognition. Connection between MP 210 and wireless probes must be established.

3. INFORMATION

"Information" menu allows to view information about the instrument, probes and module connected to the "Wireless probe", "Mini-DIN 1", "Mini-DIN 2" or "Module" connections. To enter in this menu from home screen, select the "Information" menu with the arrow keys then press OK.



Available information for probes and module is:

- Type of probes and module
- Date of the last calibration or adjustment
- Serial number
- Firmware version
- Measuring range

Available information for the instrument is:

- Type of instrument
- Serial number
- Firmware version
- > The function key "Measurement" allows to access directly to the "Measurement" menu.

8 INFORMATION

The instrument is on.

➤ With the arrow keys, go to "Configuration" menu.



> Press **OK**.

4.1 Set language

"Configuration" screen is displayed.

- > Select "Language" with the arrow keys then press **OK**. Available languages are displayed.
- Press Up and Down arrows to select the required language: FRA, ENG...
- Press OK.

4.2 Modify date and time

- "Configuration" screen is displayed.
- > Select "Date/time" with the arrow keys then press OK. The screen of configuration for date and time is displayed.
- ➤ Go to the "Date" format with arrow keys then press OK.
- > Select: DD/MM/YYYY, MM/DD/YYYY or YYYY/MM/DD then press **OK**.
- > Go to the day then press OK.
- With Up and Down keys, set the first digit of the day then go to the following one with right arrow.
- > Press **OK** to validate.
 - Perform the same procedure to set the month and year.
- ➤ Go the "Time" format with arrow keys then press **OK**.
- > Select the time format: "12H" or "4H" then press OK.

If "12H" is selected, it is possible to choose between "AM" for ante meridiem or "PM" for post meridiem.

- > Press **OK**, select "**AM**" or "**PM**" then press **OK** to validate.
- ➤ Go the time then press OK.
- With Up and Down keys set the first digit of the day then go to the following one with right arrow.
- Press **OK** to validate.
 - Perform the same procedure to set minutes and seconds.
- > Press function key "Validate" to leave the screen and to save modifications or press Esc to cancel.

4.3 Activate or deactivate the beep key

"Configuration" screen is displayed.

- > Select "**Key beep**" with arrow keys.
- Press OK to activate or deactivate the beep key.

The box is ticked if the beep is activated and unticked when the beep is deactivated.

Settings Language Key beep 15 min Backlight Factory

4.4 Set auto-off

The auto-off function turns off the instrument after a moment of unused.

It is possible to set the auto-off of the instrument at 15 / 30 / 45 / 60 / 75 / 90 / 105 or 120 minutes or to deactivate it.

"Configuration" screen is displayed.

- > Select "Auto-off" with arrow keys then press OK.
- Select the required duration or OFF to deactivate it with Up and Down keys.
- Press OK to validate.



Date: DD/MM/YYYY

34 :

05 / 2015

24H

20

06 /



SET THE INSTRUMENT 9

4.5 Set backlight

"Configuration" screen is displayed.

- > Select "Backlight" with arrow keys then press **OK**.
- > Select the backlight level between 1 and 9 or "Auto" with Up and Down keys.
- Press **OK** to validate.



4.6 Set security

This part allows to activate or deactivate a security code. This code will be asked when starting the instrument.

"Configuration" screen is displayed.

- > Select "**Security**" with arrow keys.
- Press **OK** to activate or deactivated the security.
 If the security is activated, please create a security code.



4.7 Set code

If the security is activated, the selected code will be asked when starting the instrument. "Configuration" screen is displayed and the security is activated.

- ➤ Go to "Code" then press OK.
- With arrow keys, set each digit then press OK when the last digit is set. Modifications are validated, the instrument backs to "Configuration" screen.



4.8 Set printing

"Configuration" screen is displayed.

- > Select "**Printing**" with arrow keys then press **OK**.
- ➤ Go to "Format" then press OK.
- > Select the ticket format: long or short then press **OK**.

Long ticket format: prints the measurement results + header (operator name, date and time of the intervention, type of instrument and its serial number)

Short ticket format: prints only the measurement results and the serial number of the instrument

- ➤ Go to "Logo" then press **OK** to activate or deactivate it.

 The box is ticked when the logo is activated and unticked when the logo is deactivated.
- ➤ Go to "Operator" to enter an operator name then press OK. Keypad is displayed on the bottom of the screen.
- > Select the letters with arrow keys then press **OK**.

To go from the lower case keypad to the upper case keypad then to the numeric keypad: press the function key: To delete a letter press the function key "**Delete**".



- > Press the function key "Validate" to validate the name.
- ➤ Go to "Header 1" to enter the header name then press OK. Keypad is displayed on the bottom of the screen.
- > Select the letters with arrow keys then press **OK**.
- > Press the function key "Validate" to validate the header 1.
- > Perform the same procedure to enter a name for the "Header 2", "Header 3" and "Header 4".
- > Press **ESC** to back to the "**Configuration**" screen and to validate the modifications.

Long
Long
Log
Operator
Operateur
Header 1 Entete 1
Header 2 Entete 2
Header 3 Entete 3

Settings Printing


10 SET THE INSTRUMENT

5.1 Use of the wire probes and modules


- Connect a probe
 - ➤ Connect the mini-DIN cable on the mini-DIN connection of the probe.
 - Connect the mini-DIN cable with the probe on the instrument.
 A beep indicates that the operation has been correctly performed.



- > Go to "Measurement" menu from the home screen.
- Press **OK.**Measurement are displayed.

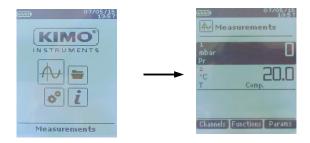

5.2 Special precautions for air velocity probes

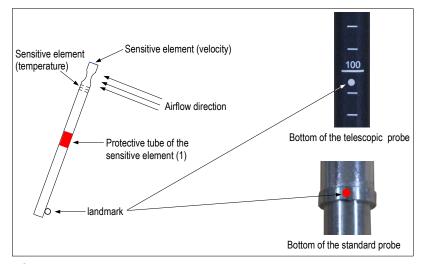

 Λ


Before any use of the device with an air velocity probe, please lower the protective tube (1) of the sensitive element (except vane probe).

Always use the standard air velocity probe with the red point in front of the flow. Always use the telescopic probe with the white point in front of the flow.

SET THE PROBES

5.3 Use of wireless probes

Add a wireless probe

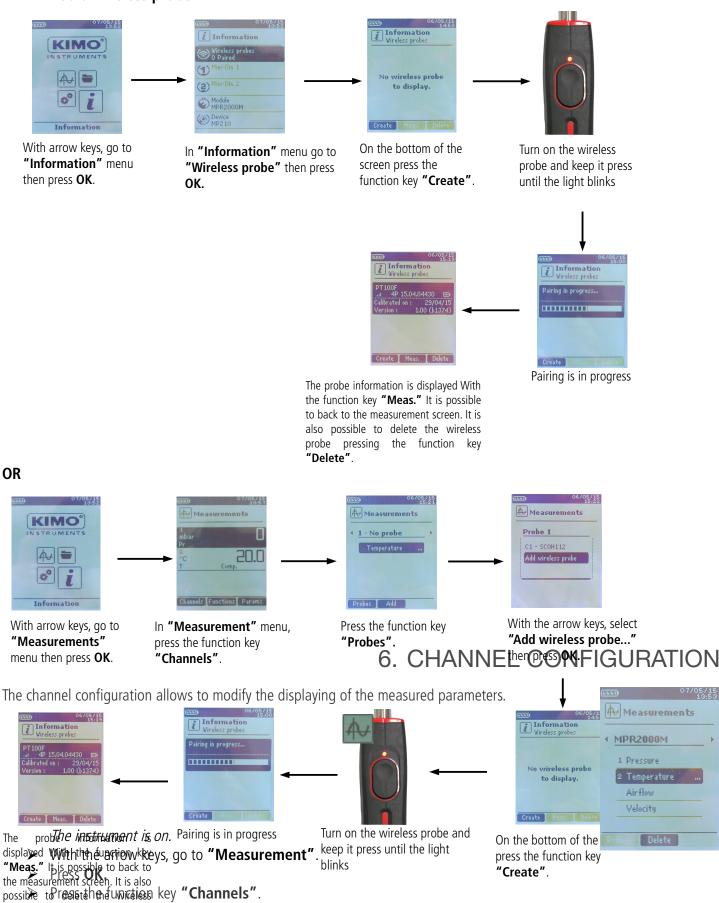

Ilt is possible from the "Channels" menu to add or delete some measurements.

probe presting the the probe are displayed.

- > Press the function key "**Delete**" in order to delete the selected measurement.
- > Press the function key "Add" to display the selected measurement.
- > Press "Add" to add a measurement on the screen (the default measurement displayed on the screen are the primary measurements).

It is possible from the "Channels" menu to choose the displaying order of the measurement on the screen.

- ➤ With arrow keys, select the measurement to modify and press **OK**.
- ➤ Go to the line "Channel num." then press OK.

Select the channel number and press **OK**.

6.1 Pressure module

Airflow:

In the "channels" menu:

- > Select with arrow key the sub-menu "Airflow" then press OK.
- > Select "Channel num." and press OK.
- > Select a channel number and press **OK**.
- Go to the line "Type" then press OK.
- > Select the required type: "Rect", "Circ" or "K factor" and press OK*.



K factor: The air flow in a ventilation opening, Qv (m^3/h), can be evaluated from a differential pressure measurement on this ventilation opening, ΔP (Pa). The K factor is a coefficient used to measure the volumetric flow rate on an air vent. This coefficient is given in the technical features of the air vent. If the coefficient is not specified in the air vent technical document or directly on the air vent, please request the manufacturer to know this coefficient.

From the air vent coefficient, named K, it is possible to calculate the volumetric flow rate:

$$Qv = K \times \sqrt{\Delta P}$$

- * For a hotwire probe, K factor* is not available. It is possible to select "Cone" in addition to "Rect" and "Circ":
 - > To select "Cone", go to the line "Cone" then press OK.
 - Select the type of cone: K35, K75, K120 or K150 and press OK.
 - Press "Measures" to display the measurements.
- * For a Ø100 mm vane probe, K factor* is not available. It is possible to select "Cone" in addition to "Rect" and "Circ":
 - > To select "Cone", go to the line "Cone" then press OK.
 - Select the type of cone: K25 or K85 and press OK.
 - Press "Measures" to display the measurements.
 - > If the type is **Rect** or **Circ**:
 - Go to "Rect" or "Circ", press OK, select its size then press OK to validate.
 - Go to the line "Areas" then press **OK**.

It is possible to change units and size.

- * For more details about the KS after the least of the control of
 - To modify areas, select with arrow keys "Rect." or "Circ." and press OK.
 - Select the size to modify in the list and press **OK**.
 - Set the size with arrow keys between **1 and 2500 mm** then press **OK**.
 - For a **K factor***: go to **"K factor"**, press **OK**, select the K factor then press **OK** to validate.
 - ➤ If the airflow is calculated with a **pressure module**, then go to "d/p elem." to select the differential pressure element. Press OK then select the element between "Pitot L" (coefficient: 1.0015), "Pitot S" (coefficient: 0.84), "Debimo" (coefficient: 0.8165) and "Other". If "Other" is selected, then enter its differential pressure coefficient between 0 and 9.9999.

➤ Go to the line "K2 fact." and press OK to select or unselect the K2 factor.

K2 factor is a coefficient which is applied to correct the flow rate only for the rectangular or circular surfaces.

Air velocity:

In the "channels" menu:

- > Select with arrow key the sub-menu "Air velocity" then press OK.
- > Select "Channel num." and press OK.
- > Select a channel number and press **OK**.
 - "D/p pressure" and "D/p coeff." are displayed.
- > Select with arrow keys "D/p pressure" and press OK.
- Select Pitot L, Pitot S, Debimo or Other and press OK.
 There is a differential pressure coefficient for differential pressure instrument,
- > Press Esc to back to "Channel" menu.

6.2 Vanes and hot wire

In the "channels" menu:

- > Select with arrow key the sub-menu "Airflow" then press OK.
- > Select "Channel num." and press OK.
- > Select a channel number and press **OK**.
- > Go to the line "Type" then press **OK**.
- > Select the required type: "Rect", "Circ" or "K factor"* and press OK*.

If the type is **Rect** or **Circ**:

- ➤ Go to "Rect" or "Circ", press OK, select its size then press OK to validate.
- ➤ Go to the line "Areas" then press **OK**. *It is possible to change units and size.*
 - > Select "Unit" with the arrow keys then press OK. Select mm or in and press OK.
 - To modify areas, select with arrow keys "Rect." or "Circ." and press OK.
 - > Select the size to modify in the list and press **OK**.
- > Set the size with arrow keys between **1 and 2500 mm** then press **OK**.
- For a **K factor***: go to **"K factor"**, press **OK**, select the K factor then press **OK**** to validate.
- ** For a hotwire probe, K factor* is not available. It is possible to select "Cone" in addition to "Rect" and "Circ":
 - > To select "Cone", go to the line "Cone" then press OK.
 - Select the type of cone: **K35**, **K75**, **K120** or **K150** and press **OK**.
 - Press "Measures" to display the measurements.
- ** For a Ø100 mm vane probe, K factor* is not available. It is possible to select "Cone" in addition to "Rect" and "Circ":
 - > To select "Cone", go to the line "Cone" then press OK.
 - Select the type of cone: K25 or K85 and press OK.
 - Press "Measures" to display the measurements.
 - ➤ If the airflow is calculated with a **pressure module**, then go to "d/p elem." to select the differential pressure element. Press OK then select the element between "Pitot L" (coefficient: 1.0015), "Pitot S" (coefficient: 0.84), "Débimo" (coefficient: 0.8165) and "Other". If "Other" is selected, then enter its differential pressure coefficient between 0 and 9.9999.
 - ➤ Go to the line "K2 fact." and press OK to select or unselect the K2 factor.

 K2 factor is a coefficient which is applied to modify the flow rate only for the rectangular or circular surfaces.

6.3 Delta T

Delta T is a function which allows to define a temperature difference calculated between two temperature channels of the same type.

- > Connect the thermocouple module then the probes.
 - In the "Channels" menu:
- > Select with arrow keys the sub-menu "Delta T" then press OK.
- > Select "Channel number" and press OK.
- > Select a channel number and press **OK**.
- > Select the channels in which Delta T will be calculated.
- ➤ Go to "Channel A" with arrow keys and press OK.
- > Select the channel T1, T2, T3 or T4 and press **OK**.
- ➤ Go to "Channel B" with arrow keys and press OK.
- > Select the channel T1, T2, T3 or T4 and press **OK**.
- > Press the key "Measurement".

The instrument displays the measurements.

7. START AND RECORD DATASET

The instrument in on.

> Select with arrows keys "Measurement" menu.



- > Press **OK**.
- > Select with arrows keys the measurement in which the dataset will be performed.
- > Press "Functions" key then select "Dataset" with arrow keys and press OK. Dataset menu is displayed.
- > Go to line "Name" with arrow keys and press OK. A keypad is displayed on the bottom of the screen.
- > Select the letters with arrow keys then press **OK**. To go from the lower case keypad to the upper case keypad then to the numeric keypad:
- press the function key: aA1 To delete a letter press the function key "Delete".
- Press the function "Validate" to validate the name of the dataset.
- A dataset is composed of several dated measuring points. You can choose between an automatic dataset or a manual dataset.
- > Go to "Type" with arrow keys then press OK.
- > Select "Manu." for manual or "Auto." for automatic.
- ➤ Go to "Start" then press OK.

7.1 Start and record datasets

7.1.1 Manual dataset

A **manual dataset** is composed of measuring points selected by the operator.

Manual mode is selected, measurements are displayed.

- > Press **OK** to validate a measuring point.
- > Press **OK** as many time as the required number of points.
- > Press the function key "Save".

The instrument displays the measuring dataset: type of dataset, number of points, date, minimum, maximum, average and standard deviation.

The dataset is automatically recorded.

- > Press **OK** to display the graph of the results.
- > Press the function key "Zoom+" to display the detail of the calculated points.
- > Press **Esc** key to back to the dataset screen.
- > Press the function key "**Print**" to print the dataset. Printing mode is displayed.
- > Go to the line "Channels info" and press OK to print the channels on the printing ticket.
- > Go to the line "**Details**" and press **OK** to print details of the dataset on the printing ticket.
- > Press the function key "Validate" to print. The instrument backs to the dataset display.
- > Press **Esc** to back to "measurement" menu.

7.1.2 Automatic dataset

An **automatic dataset** is composed of measuring points with interval of time.

Automatic mode is selected, measurements are displayed.

- > Press the function key "**Duration**" to set the dataset duration.
- > Press **OK** on the line "**Duration**".
- ➤ Go to "Hour" with the arrow keys then press **OK**, set the duration with arrow keys then press **OK**.









- Perform the same procedure for the minutes and seconds.
- > Press the function key "Validate" when the duration is set.
- > Press **OK** on the line "Interval".
- ➤ Go to "min" with the arrow keys then press **OK**, set the duration with arrow keys then press **OK**.
- Perform the same procedure for the seconds.
- > Press the function key "Validate" when the interval is set.
- > Press **Esc** to back to measuring dataset.
- > Press the function key "Start" to launch the measuring dataset.

The countdown starts.

- It is possible to stop the measuring dataset by pressing the function key "Stop".
- Press "**Start"** to restart the dataset.
- Press "Duration" to modify the duration.
- Press "Save" to save the dataset.

The instrument displays the measuring dataset: type of dataset, number of points, date, minimum, maximum, average and standard deviation.

The dataset is automatically recorded.

- > Press **OK** to display the graph of the results.
- > Press the function key "Zoom+" to display the detail of the calculated points.
- > Press **Esc** key to back to the dataset screen.
- > Press the function key "Print" to print the dataset. Printing mode is displayed.
- ➤ Go to the line "Channels info" and press OK to print the channels on the printing ticket.
- > Go to the line "**Details**" and press **OK** to print details of the dataset on the printing ticket.
- Press the function key "Validate" to print. The instrument backs to the dataset display.
- Press Esc to back to "Measurement" menu.

7.1.3 View the recorded datasets


➤ Go to the "Dataset" menu with the arrow keys from the home screen. The different measuring datasets are displayed. They are listed by date.



- > To delete all the datasets: press the function key "Del all".
- > To delete just one dataset: go to the dataset to delete with the arrow keys and press the function key "Delete".
- A confirmation window opens: select **YES** to confirm the deletion or **NO** to cancel.

7.2 Launch and save averages

The instrument is on.





Press the function key "Functions" then select "Averages" then press OK. "Average" menu is displayed.

7.2.1 Point/Point average

This function allows to calculate the average value of various points that you can select.

- ➤ Go to "Point/Point" line in the "Averages" menu and press OK.
- Press OK to add measuring points.
 The instrument displays the type of dataset, number of points, date, minimum, maximum, average and standard deviation.
- > Press the function key "**Details**" to get details for each point.
- > Press the function key "Save" to save the Point/Point average.



A keypad is displayed on the bottom of the screen.

> Select the letters with arrow keys then press **OK**.

To go from the lower case keypad to the upper case keypad then to the numeric keypad: press the function key: **A1** To delete a letter press the function key **"Delete"**.

> Press the function key "Validate" to validate the name.

The recap of the Point/Point average is displayed.

- > Press OK to display the graph.
- > Press the function key "Zoom+" to display the detail of the calculated points.
- > Press **Esc** key to back to the dataset screen.
- ➤ Press the function key "Print" to print the dataset. Printing mode is displayed.
- ➤ Go to the line "Channels info" and press OK to print the channels on the printing ticket.
- ➤ Go to the line "**Details**" and press **OK** to print details of the dataset on the printing ticket.
- Press the function key "Validate" to print.
 The instrument backs to the Point/point average display.
- > Press **Esc** to back to "Measurement" menu.



This function allows to calculate an average value that the device measured in an interval chosen time.

- ➤ Go to "Automatic" line in the "Averages" menu and press OK.
- > Press the function key "Start" to start the measurement. Duration is displayed.
- Press the function key "Stop" to stop the measurements.
 Measurements, average, minimum and maximum values, standard deviation and duration are displayed.
- > Press the function key "Start" to launch a new automatic average.
- Press the function key "Save" to save the results.
 A keypad is displayed on the bottom of the screen.
- ➤ Select the letters with arrow keys then press **OK**.

 To go from the lower case keypad to the upper case keypad then to the numeric keypad:
- press the function key: aA1
 To delete a letter press the function key "Delete".
- Press the function key "Validate" to validate the name.
 - The recap of the automatic average is displayed..
- > Press OK to display the graph.
- > Press the function key "Zoom+" to display the detail of the calculated points.
- > Press **Esc** key to back to the dataset screen.
- Press the function key "Print" to print the dataset. Printing mode is displayed.
- ➤ Go to the line "Channels info" and press OK to print the channels on the printing ticket.
- > Go to the line "**Details**" and press **OK** to print details of the dataset on the printing ticket.
- Press the function key "Validate" to print.
 The instrument backs to the automatic average display.
- Press Esc to back to "Measurement" menu.

7.2.3 Automatic Point/Point average

This function allows to calculate the average value of various points, calculated themselves on a duration beforehand defined.

➤ Go to "Auto Pt/Pt" line in the "Averages" menu and press OK. A duration is displayed on the bottom right of the screen.









- > Press the function key "**Duration**" to modify the duration if necessary.
- ➤ Go to "min" with the arrow keys then press **OK**, set the duration with arrow keys then press **OK**.
- > Perform the same procedure for the seconds.
- > Press the function key "Validate" when the interval is set.
- > Press **OK** to start the measurement.

A the end of the measuring dataset, measurements, average, minimum and maximum values, standard deviation and duration are displayed.

> Press **OK** to add a new measuring point to the calculation.

The countdown starts.

- > Press the function key "**Details**" to get details of the results.
- ➤ Press the function key "Save" to save the results of the automatic average.

 A keypad is displayed on the bottom of the screen.
- > Select the letters with arrow keys then press **OK**.

To go from the lower case keypad to the upper case keypad then to the numeric keypad:

press the function key: aA1

To delete a letter press the function key "Delete".

> Press the function key "Validate" to validate the name.

The recap of the dataset is displayed.

- > Press **OK** to display the graph.
- > Press the function key "Zoom+" to display the detail of the calculated points.
- > Press **Esc** key to back to the dataset screen.
- Press the function key "Print" to print the dataset. Printing mode is displayed.
- ➤ Go to the line "Channels info" and press OK to print the channels on the printing ticket.
- ➤ Go to the line "**Details**" and press **OK** to print details of the dataset on the printing ticket.
- ➤ Press the function key "Validate" to print.

The instrument backs to the automatic point/point average display.

> Press **Esc** to back to "Measurement" menu.

Duration min sec 00 10 Validate Validate Average Auto Pt/Pt mbar

Average



7.3 COmax

For a CO/temperature probe, it is possible to calculate a COmax. This function allows to measure on an adjustable duration the maximum value of CO reached during this time interval..

- ➤ In the "Functions" menu, select with arrow keys "COmax" then press OK.

 Measurements and a 30 s duration are displayed.
- > Press the function key "**Duration**" to modify the countdown.
- ➤ Go to "min" with the arrow keys then press **OK**, set the duration with arrow keys then press **OK**.
- > Perform the same procedure for the seconds.
- > Press the function key "Validate" when the duration is set.
- > Press the function key "Start" to launch the measurement dataset of COmax.
 - It is possible to stop the measuring dataset by pressing the function key "Stop".
 - Press **"Start"** to restart the dataset.
 - Press "Duration" to modify the countdown.

At the end of the duration, the instrument displays the results of COmax.

> Press **Esc** to back to "Measurement" menu.

7.4 Hold-Min./Max.

- ➤ Go to "Measurement" menu with the arrow keys and press OK. Measurements are displayed.
- Press OK.

Measurements are frozen on the screen and the minimum and maximum values are displayed.

8. SETTING OF MEASUREMENT PARAMETERS

The instrument is on.

➤ Go to "Measurement" menu with the arrow keys and press OK.



- > Select the measurement to set with the arrow keys.
- Press the function key "Params".
 The different parameters are displayed.
- For all probes and modules, it is possible to modify the channel number.
- > Select "Channels" with the arrow keys and press OK.
- > Select "Channel num." and press OK.
 Select a channel number for the parameter, and press OK. This number defines the order display of the parameters.

8.1 Pressure module

8.1.1 Unit

Pressure:

- ➤ Go to the line "Pressure" and press OK.
- ➤ Select with the arrow keys the required unit: Pa, daPa, mmH₂0, mmHg, mbar, hPa, inWg or kPa.
- > Press **OK** to validate the unit selection.

Temperature:

- ➤ Go to the line "Temperature" and press OK.
- > Select with the arrow keys the required unit: °C or °F
- > Press **OK** to validate the unit selection.

Airflow:

- ➤ Go to the line "Airflow" and press OK.
- > Select with the arrow keys the required unit: m³/h, L/s, cfm or m³/s
- > Press **OK** to validate the unit selection.

Air velocity:

- ➤ Go to the line "Air velocity" and press OK.
- > Select with the arrow keys the required unit: m/s, fpm, km/h or mph.
- > Press **OK** to validate the unit selection.

8.1.2 Type

<u>Temperature:</u>

- > Select "Type Tc" with arrow keys and press OK.
- > Select the required type of thermocouple: K, T, J or S
- Press OK to validate.

8.1.3 Normative value

Allows to calculate the instantaneous airflow in standardized temperature and atmospheric pressure conditions.

Airflow:

- > Go to the line "Normo values" and press OK.
- > Select **None**, **DIN1343** (temperature: 0°C, Atmospheric pressure: 1013.25 hPa) or **ISO2533** (temperature: 15°C, Atmospheric pressure: 1013.25 hPa) and press **OK**.



8.1.4 Alarm

<u>Temperature:</u>

- ➤ Go to the line "Temp.alarm" and press OK.
- > Select "High alarm" and/or "Low alarm" by pressing OK. It is possible to set the high and low thresholds.
- ➤ Go to the line "High threshold" and press OK.
- > Set the threshold with the arrow keys between -9999.9 and 9999.9 °C then press **OK**.
- > Go to the line "Low threshold" and press OK.
- > Set the threshold with the arrow keys between -9999.9 and 9999.9 °C then press **OK**.

8.1.5 Integration

Pressure, airflow and air velocity

- > Go the line "Integration" and press OK.
- > Select the integration coefficient between **0** and **9** with the arro keys.
- > Press OK to validate.

8.1.6 Atmospheric pressure

Air velocity:

- > Go to the line "Atmo. Press." and press OK.
- > Select the atmospheric pressure with the arrow keys between 800 and 1200 hPa.
- > Press **OK** to validate.

8.1.7 Temperature compensation

<u>Temperature:</u>

- ➤ Go to the line "**Temp.Comp"** then press OK.
- > Set the compensation temperature with the arrow keys between -200 and 1300 °C.
- > Press **OK** to validate.

8.2 Thermocouple module

8.2.1 Unit

- > Go to the line "Temperature" and press OK.
- > Select the required unit: °C or °F
- > Press OK to validate the unit selection.

8.2.2 Type

- Go to the line "Type Tc" and press OK.« ».
- > Select the type of thermocouple: K, T, J and S
- Press OK to validate.

8.2.3 Alarm

- ➤ Go to the line "Temp.alarm" and press OK.
- > Select "High alarm" and/or "Low alarm" by pressing OK. It is possible to set the high and low thresholds.
- ➤ Go to the line "High threshold" and press OK.
- > Set the threshold with the arrow keys between -9999.9 and 9999.9°C then press **OK**.
- > Go to the line "Low threshold" and press OK.
- > Set the threshold with the arrow keys between -9999.9 and 9999.9 °C then press **OK**.

8.3 Vane probe and hotwire probe

8.3.1 Unit

Air velocity:

- ➤ Go to the line "Air velocity" and press OK.
- > Select with the arrow keys the required unit: m/s, fpm, km/h or mph.
- > Press **OK** to validate the unit selection.

Temperature:

- ➤ Go to the line "Temperature" and press OK.
- > Select the required unit: °C or °F
- > Press OK to validate the unit selection.

Airflow:

- ➤ Go to the line "Airflow" and press OK.
- > Select with the arrow keys the required unit: m³/h, L/s, cfm or m³/s
- > Press **OK** to validate the unit selection.

Integration

Airflow and air velocity

- ➤ Go the line "Integration" and press OK.
- > Select the integration coefficient between **0** and **9** with the arro keys.
- > Press **OK** to validate.

8.3.2 Normative value

<u>Airflow</u>

- > Go to the line "Normo Values" and press OK.
- > Select None, DIN1343 or ISO2533 and press OK.

8.3.3 Alarm

Temperature:

- > Go to the line "Temp.alarm" and press OK.
- > Select "High alarm" and/or "Low alarm" by pressing OK. It is possible to set the high and low thresholds.
- > Go to the line "High threshold" and press OK.
- > Set the threshold with the arrow keys between -9999.9 and 9999.9°C then press **OK**.
- > Go to the line "Low threshold" and press OK.
- > Set the threshold with the arrow keys between -9999.9 and 9999.9°C then press **OK**.

For a hotwire probe, it is possible to modify the atmospheric pressure.

8.3.4 Atmospheric pressure

- > Go to the line "Atmo. Press." and press OK.
- > Select the atmospheric pressure with the arrow keys between 800 and 1200 hPa.
- > Press **OK** to validate.

8.4 Gas leak

8.4.1 Unit

- ➤ Go to the line "CH4" and press OK.
- > Select the required unit: ppm, %vol, %LEL
- > Press OK to validate the unit selection.

8.5 CO/temperature probe

8.5.1 Unit

<u>Temperature:</u>

- ➤ Go to the line "Temperature" and press OK.
- > Select the required unit: °C or °F
- > Press OK to validate the unit selection.

8.5.2 Alarm

<u>CO:</u>

- ➤ Go to the line "CO Alarm CO" or "CO2 Alarm" and press OK.
- ➤ Select "Alarm 1" or "Alarm 2" pressing OK.

 It is possible to set the thresholds 1 and 2 of the alarms.
- ➤ Go to the line "Threshold 1" and press OK.
- > Set the threshold with the arrow keys between 0 and 5000 ppm then press **OK**.
- ➤ Go to the line "Threshold 2" and press OK.
- > Set the threshold with the arrow keys between 0 and 5000 ppm then press **OK**.

<u>Temperature:</u>

- > Go to the line "Temp. alarm" and press **OK**.
- > Select "High alarm" and/or "Low alarm" by pressing OK. It is possible to set the high and low thresholds.
- > Go to the line "High threshold" and press OK.
- > Set the threshold with the arrow keys between -9999.9 and 9999.9°C then press **OK**.
- > Go to the line "Low threshold" and press OK.
- > Set the threshold with the arrow keys between -9999.9 and 9999.9°C then press **OK**.

8.6 Tachometry

8.6.1 Unit

- > Go to the line "**Tachometry**" and press **OK**.
- > Select the required unit: tr/min or RPM.
- > Press OK to validate the unit selection.

8.6.2 Type

- > Go to the line "Tacho type" and press OK.
- > Select the required type: Optic or Contact
- > Press OK to validate the type.

