


Wind101A Wind Speed Data Logger

The Wind101A is a complete system to accurately measure and record wind speed. This low cost wind speed recording system comes complete with a data logger, weatherproof enclosure, a three-cup anemometer and all the necessary cabling to quickly get up-and-running. The logger can record over 1,000,000 readings and the storage medium is non-volatile, solid state memory, providing maximum data security even if the battery becomes discharged. The device can be started and stopped directly from a computer using the MadgeTech Software.

MadgeTech 4 Software Features



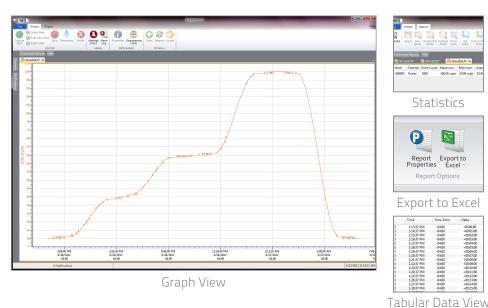

- Statistics
- Digital calibration
- Zoom in/ zoom out
- Lethality equations (F0, PU)
- Mean Kinetic Temperature
- Full time zone support
- Data annotation
- Min./Max./Average lines
- Summary view



Features

- Durable Housing for Logger
- 3-cup Anemometer
- 0 to 100 MPH (0 to 160KPH) Range
- 0.085 MPH Resolution at a 10 Second Sampling Rate
- ±2.5% Calibrated Accuracy over 10 to 100 MPH (16 to 160 KPH) Range
- 1 Second Reading Rate
- Multiple Start/Stop Function
- Ultra High Speed Download
- 1,047,552 Reading Storage Capacity
- Battery Life Indicator
- Optional Password Protection
- Field Upgradeable

Benefits

- Simple Setup and Installation
- Minimal Long-Term Maintenance
- Long-Term Field Deployment

Applications

- Alternative Energy Studies
- Meteorology/Climatology
- Wind Turbine Location Assessments

Λ	tom	1	
	EOF	าสบ	$\cap \Pi$

SPECIFICATIONS

Specifications are subject to change without notice. Specific warranty remedy limitations apply. Call (603) 456-2011 or go to madgetech.com for details.

MEASUREMENT				
Measurement Range	0 to 100 mph (0 to 45 m/s)			
Resolution	0.085 mph at 10 second reading interval			
Accuracy	±2.0 mph from 0 to 10 mph ±2.5% of reading from >10 to 100 mph			
Starting Threshold	1.75 mph			
Input Connection	6-position removable screw terminal			
GENERAL				
Start Modes	Immediate start Delay start up to 18 months Multiple pushbutton start/stop			
Stop Modes	Manual through software Timed (specific date and time)			
Multiple Start/Stop Mode	Start and stop the device multiple times without having to download data or communicate with a PC			
Real Time Recording	May be used with PC to monitor and record data in real time			
Password Protection	An optional password may be programmed into the device to restrict access to configuration options. Data may be read out without the password.			
Memory	1,0475,520 readings; software configurable memory wrap 523,776 readings in multiple start/stop			
Wrap Around	Yes			
Engineering Units	See the Wind101A Product User Guide for instructions on how to program wind speed engineering units.			
LEDs	2 status LEDs			

Reading Rate	1 reading every second up to 1 reading every 24 hours		
Battery Type	3.6V lithium battery included; user replaceable		
Battery Life	Dependent on frequency and duty cycle 10 months typical at 25 °C and 10 second reading rate		
Time Accuracy	±1 minute/month at 25 °C (77 °F) (Stand alone mode)		
Computer Interface	USB (interface cable required); 115,200 baud		
Operating System Compatibility	Windows XP SP3 or later		
Software Compatibility	Standard Software version 2.03.06 or later Secure Software version 4.1.3.0 or later		
Anemometer Operating Environment	55 °C to +60 °C (-67 °F to +150 °F) 0 %RH to 100 %RH		
Data Logger Operating Environment	-20 °C to +60 °C (-4 °F to +140 °F) 0 %RH to 100 %RH		
IP Rating	IP65		
Enclosure Dimensions	2.9 in x 5.8 in x 1.5 in (74 mm x 148 mm x 39 mm)		
Anemometer Dimensions	2.1 in height x 7.53 in diameter (54 mm height x 192 mm dia.)(mount post not included)		
Material	Polycarbonate		
Weight	18.1 oz (513 g)		
Approvals	CE		

BATTERY WARNING: FIRE, EXPLOSION AND SEVERE BURN HAZARD. DO NOT RECHARGE, DISASSEMBLE, HEAT ABOVE 100 °C (212 °F), INCINERATE, CRUSH, OR EXPOSE CONTENTS TO WATER.

Ordering Information

Wind101A (25 ft)	PN 901870-00	Wind speed data logger. Includes 3-cup anemometer with sensor connection cable (25 ft), weatherproof enclosure and the IFC200 (USB) interface cable.
Wind101A (50 ft)	PN 901877-00	Wind speed data logger. Includes 3-cup anemometer with sensor connection cable (50 ft), weatherproof enclosure and the IFC200 (USB) interface cable.
Wind101A (100 ft)	PN 901872-00	Wind speed data logger. Includes 3-cup anemometer with sensor connection cable (100 ft), weatherproof enclosure and the IFC200 (USB) interface cable.
Wind101A (150 ft)	PN 901874-00	Wind speed data logger. Includes 3-cup anemometer with sensor connection cable (150 ft), weatherproof enclosure and the IFC200 (USB) interface cable.
LTC-7PN	PN 900352-00	Replacement battery for the Wind101A

For Quantity Discounts call (603) 456-2011 or email sales@madgetech.com

